



EINSPINE'S DRYING LINE* DO IT YOURSELF INSTALLATION INSTRUCTIONS



WHAT YOU'LL NEED

- A DRILL
- ROPE (DEPENDING ON THE LENGTH OF YOUR ROOM, 40 FT. SHOULD SUFFICE)
- X2 HOOKS
- X1 CLEAT
- X1 SINGLE PULLEY
- X1 DOUBLE PULLEY

STEP ONE

"LOCATION! LOCATION! LOCATION!"

YOU WILL WANT A LOCATION WITH A DECENT CEILING HEIGHT (10 FT. IS IDEAL, BUT DON'T WORRY IF YOU HAVE LESS), NATURAL LIGHT OR PLENTY OF VENTILATION.

STEP TWO

"GET HOOKED"

LOCATE TWO STUDS TO GIVE YOUR DRYING LINE A STURDY ANCHOR. MARK THE DESIRED SPOT WITH A PENCIL AND DRILL A SMALL PILOT HOLE SO THAT YOUR TWO HOOKS EASILY SCREW IN. MAKE SURE THE OPEN ENDS OF YOUR HOOKS FACE UP.



STEP THREE

"POWER PULLEY"

HANG THE DOUBLE PULLEY ON THE RIGHT HOOK. THIS WILL BE YOUR "CONTROL-END" AND YOU WILL BE ABLE TO RAISE AND LOWER YOUR DRYING LINE FROM THIS SIDE. THE SINGLE PULLEY GOES ON THE LEFT HOOK. SCREW YOUR CLEAT INTO THE WALL ABOUT THREE FEET DIRECTLY BELOW YOUR CONTROL-END PULLEY. IF YOU ARE LEFT-HANDED YOU MAY WANT TO PUT THE CONTROL-END ON THE LEFT.



STEP FOUR

"ROPE-A-DOPE"

THREAD ONE END OF THE ROPE UP THROUGH THE DOUBLE PULLEY (IT DOESN'T MATTER WHICH TRACK) AND PULL IT ACROSS TO THE SINGLE PULLEY. NOW THREAD THE ROPE FROM THE BOTTOM OF THE SINGLE PULLEY OUT THROUGH THE TOP. RUN IT BACK OVER TO THE DOUBLE PULLEY, GUIDING THE ROPE DOWN THROUGH THE SECOND TRACK.



STEP FIVE


"LOOP-THE-LOOPS"

WRAP THE SHORT END OF THE ROPE AROUND THE CLEAT TO KEEP THE ROPE FROM SLIPPING BACK THROUGH THE DOUBLE PULLEY. SLACKEN THE LONG END OF THE ROPE TO LOWER ONE LINE DOWN TO A HEIGHT YOU CAN COMFORTABLY REACH. FOLLOW THE INSTRUCTIONS ABOVE TO TIE YOUR FIRST LOOP TO THE RIGHT OF THE SINGLE PULLEY.

STEP SIX

"LOOPS GALORE"

CONTINUE MAKING LOOPS IN THE DIRECTION OF THE DOUBLE PULLEY. BE SURE TO LEAVE ABOUT 4-5 INCHES BETWEEN EACH LOOP!

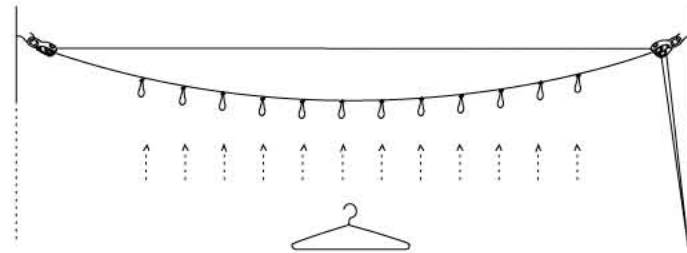

STEP SEVEN

"PUT IT ALL ON THE LINE"

UNWRAP YOUR ROPE FROM THE CLEAT AND PULL BOTH ROPES ON THE DOUBLE PULLEY RAISING THE LINE INTO THE "UP" POSITION. YOU CAN CENTER THE LOOPS BY PULLING ON EITHER ROPE. ONCE THE LOOPS ARE CENTERED, TIE OFF BOTH ROPES TO THE CLEAT.

\$@&!!!

CARE TO AIR? ALMOST 60% OF THE CLIMATE IMPACT FROM A PAIR OF LEVI'S® JEANS HAPPENS IN YOUR LAUNDRY ROOM. NEARLY 80% OF THAT IS DUE TO MACHINE DRYING. THE LEVI'S® BRAND CHALLENGES YOU TO CARE TO AIR.

DOING YOUR LAUNDRY WILL NEVER BE THE SAME. CARE FOR OUR PLANET BY WASHING IN COLD, WASHING ONLY WHEN NECESSARY AND LINE DRYING YOUR CLOTHES ON YOUR NEWLY INSTALLED EINSPINE'S DRYING LINE.

WWW.LEVI.COM/CARE